

SkyCaddie® GIMME™



QUICK START GUIDE
GUIDE DE DÉMARRAGE RAPIDE
GUÍA DE INICIO RÁPIDO
KURZANLEITUNG
SNABBSTARTSGUIDE
 快速入门操作指南
 クイックスタートガイド

1.0 SkyCaddie® GIMME™ Device Overview Powered by Core Golfer Technology

SkyCaddie's Sport Series of products use CGT technology to provide a more economical distance solution by substituting conventional GPS technology found in competitive devices in lieu of SkyCaddie's unmatched, but more costly, TruePoint Positioning Technology. Accuracy and reliability remain superior to other brands by combining conventional GPS with SkyCaddie's proprietary, high-precision, ground-corrected course maps to eliminate errors known to be inherent in maps provided by others. So, when it comes to distance, nothing beats a SkyCaddie, unless it's another SkyCaddie... trusted by more serious golfers than all other rangefinders combined.

2.0 Power on the GIMME

Press and hold the Left Soft Key. (To change the default language: In the Main Menu, press Down on the Thumbpad to highlight "More" and press the Right Soft Key. In the "More" menu, press Down on the Thumbpad to highlight "Language," then press Right/Left on the Thumbpad to display the language options. Press the

Right Soft Key to select your preferred language. Press the Left Soft Key to return to the Main Menu.

3.0 TO PLAY WITH THE GIMME IMMEDIATELY

3.1. Power on the GIMME: Press and hold the Left Soft Key.

3.2. Select "Play Golf"

Press Up/Down on the Thumbpad to highlight "Play Golf" and press the Right Soft Key. The GIMME will automatically search for golf courses nearest you. (Press the Left Soft Key any time you wish to exit to the Main Menu.)

3.3. Select Your Course and Hole

Pressing Up/Down on the Thumbpad, select your desired course, then press Left/Right on the Thumbpad to choose the starting hole. To confirm, press the Right Soft Key.

3.4. View Distances



The GIMME will automatically display distances to the front, center and back of the green from where you're standing. It will instantly update the distances as you move.

3.5. Mark Your Shot

Press Left on the Thumbpad to display the Mark Ball screen. Press the Right Soft Key to mark your ball, then take your shot. This screen will show your shot distance when you arrive where your ball landed. To return to the Play screen, press Right on the Thumbpad.

3.6. Enter Your Score

From the Play screen, press Right on the Thumbpad to view the Scorecard. The current hole will be highlighted. Press the Right Soft Key to enter scores and the Thumbpad to change par or scores. Press the Center Key to save the score and return to the Scorecard. Press Left on the Thumbpad to return to the Play screen.

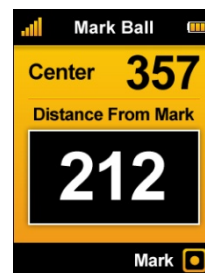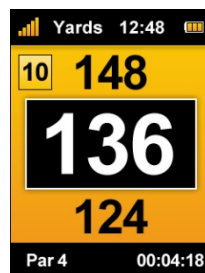

	H	P	S	H	P	S
1	5	5	10	4	5	
2	4	4	11	4	0	
3	4	0	12	3	0	
4	3	0	13	4	0	
5	5	0	14	5	0	
6	4	0	15	4	0	
7	3	0	16	3	0	
8	4	0	17	4	0	
9	4	0	18	5	0	
Total:						0 (= 0)

3.7. Advance to the Next Hole

Your GIMME should automatically advance to the next hole. However, in the Play screen you can also press Up/Down on the Thumbpad to change holes.

3.8. Power Off the GIMME

At the end of your round, press and hold the Left Soft Key until the GIMME powers down.

4.0 TO PLAY WITH THE GIMME LATER

If you are not planning to play golf with the GIMME immediately, we recommend following these steps (in order):

1. Charge the GIMME: Plug the GIMME into an open wall outlet to recharge the battery. See Section 6.0, "Charging Your GIMME", for details. You may complete the next step while the GIMME is charging.
2. Download CaddieSync® Express and the GIMME™ User Guide from SkyCaddie.com: Both files are freely available for download.
3. After 30 days, register your GIMME™ at www.myskycaddie.com. See Section 5.0, "Activating and Registering Your GIMME", for instructions. Once finished, your GIMME will be registered in your name and you can resume playing with it at any time!

SkyCaddie® GIMME™ Device Layout

1. GPS Signal Strength
2. Distance (Yards/Meters)
3. Digital Clock
4. Battery Gauge
5. Distance to Green
6. Hole and Par
7. Left Soft Key / Power / Menu
8. Multi-directional Thumbpad
9. Right Soft Key / Enter / Select
10. Timer



5.0 Activating and Registering Your GIMME

NOTE: Your 30-Day Course Map Trial will end once you activate and register the device.

1. Using your computer, open a web browser window and go to www.myskycaddie.com.
2. In the GIMME Menu, select "More..." and then "Access Code".
3. Enter the Access Code on the webpage. The website will ask you to login to your SkyGolf® account to complete activation. If you do not have a SkyGolf account, you will have the opportunity to create one.
4. The website will provide you with an opportunity to buy a Par membership plan, if you have not done so already. See section 9.0 in this Guide for details.
5. Upon successful registration, the website will ask you to sync your GIMME, enabling your personalized information to be downloaded to the device. Follow the on-screen instructions to sync your GIMME.

6.0 Charging Your GIMME

NOTE: We recommend charging the GIMME after playing a round. If the battery level is low, a full recharge may take up to 4 hours. Charging the device after each round ensures that your SkyCaddie GIMME is ready the next time you play.

6.1. Charging Your GIMME Using a Wall Outlet

 
1. Gently pull back the rubber cover located on the back of the GIMME to gain access to the Mini-USB port. Take the cable that is included and insert the Mini-USB connector (the smaller end) into the port.
2. Take the other end of the cable (the USB connector) and insert it into the power adapter that is included.
3. Plug the power adapter into an available wall outlet.
4. The GIMME's display will turn on and you will see the Battery Gauge. The gauge will tell you when the device is fully charged.

6.2. Charging Your GIMME Using Your Computer

Your GIMME can recharge when it is connected to a computer that is powered on. Simply connect the USB end into an open USB port on your computer. Your GIMME will recharge through this connection. (NOTE: To charge the GIMME™ for the first time, please use a wall outlet instead of your computer.)

7.0 Uploading Scores and Syncing with CaddieSync® Express

To upload scores from the GIMME to your ClubSG™ Account, connect the device to your computer, power it on, and click "SYNC" in the upper right corner of the SkyGolf website. Anytime you "Sync" your device, CaddieSync® Express will check for

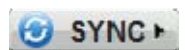

changes in status of your membership, upload your scores and check for software updates. Additionally, with your GIMME connected, syncing will log you in to your online account.

8.0 Your 30-Day Complementary Course Map Trial

- Your GIMME comes preloaded with basic green information (front, center, back distances) for courses worldwide on a 30-day trial basis.
- Your complimentary 30-day trial period will begin after your first round of golf.
- On Day 31, your GIMME will only display distances if you have purchased a Par membership plan. However, if you choose to only register your device, you will still be able to create up to 5 user courses (front, center and back of greens) using the built-in course mapping module.

9.0 SkyGolf Par Membership Plan

SkyGolf membership plans have no hidden fees or variable charges. For simplicity, SkyGolf offers one membership plan level for the GIMME: the Par membership. Through this minimal annual investment, you have access to all of SkyGolf's ground-verified course maps, software updates, post-round game analysis, and more.

Worldwide access to error-corrected maps you can trust

- Only SkyGolf spends the time and money to ground verify course maps
- Only SkyGolf eliminates known errors contained in maps derived from aerial imagery

ClubSG^{BETA} - Golf's fastest growing online community

- Enter scores and track key statistics to analyze
- Discover if your equipment is hurting your game
- Share your successes with other golfers

Save 3x the nominal cost of membership with SkyRewards™

- Earn money-saving SkyRewards Points
- Receive exclusive offers from SkyGolf Partners
- Save money on great products and services

10.0 Helpful SkyCaddie Tips

1. Never disconnect your GIMME while it is syncing to your computer. Wait until it is finished before you disconnect it, power it off, or power off your computer.
2. By default, the GIMME is designed to automatically advance to the next hole based on your location. However, if it doesn't, you can press Up on the Thumbpad. You can check the "Auto Hole Advance" setting by selecting "More" in the Main Menu and then selecting "Auto Hole Advance". It should be switched to ON. Press the Left Soft Key to return to the Main Menu.
3. Turn on your GIMME outdoors, on the course, with a clear view of the sky, to receive satellite signals. Give it an initial five minutes to warm-up before play.

4. The higher the strength on the GPS Signal Indicator, the higher the accuracy.
5. To maintain optimal accuracy, make sure the GIMME is always on during play and that it has a clear view of the sky.
6. Do not put the GIMME in your pocket during play.
7. Fully charge the battery before each round.
8. Do not expose the GIMME to extreme temperatures or to water.

11.0 Customer Support

SkyGolf is committed to providing the highest level of customer support. Before contacting our support call center, please try the following sources:

1. SkyCaddie User Guide, found in the Support section of SkyCaddie.com provides detailed instructions on how to use your SkyCaddie
2. Frequently Asked Questions section at SkyGolf.com
3. Online Support Chat available at SkyGolf.com
4. Support Forums at SkyGolf.com.
5. If you still do not find answers to your questions, you may email us using the contact form on our website or by calling Customer Support at 1-866-SKYGOLF.

12.0 Extended Warranty Option in U.S. and Canada

When registering your SkyCaddie, you will be given the option of purchasing an Extended Warranty for your GIMME if you reside in the U.S. or Canada. This will extend the standard 6-month manufacturer's limited warranty to a 12-month warranty against defects in materials and workmanship. Terms and conditions are listed online at www.SkyGolf.com.



©2013 SkyHawke Technologies, LLC. All rights reserved.
SkyGolf®, SkyCaddie®, GIMME™, SkyRewards™, CGT™,
#1 Rangefinder in Golf™, ClubSG™, TrueGround™, and TruePoint
GPS™ are trademarks of SkyHawke Technologies, LLC.
All other trademarks and copyrights are the property of their respective
owners. U.S. Patent no. 7,118,498; 6,456,938;
5,740,077, 5,507,485 and patent pending.

For product terms and conditions,
please visit www.SkyCaddie.com