

## On Play Screens



The target cursor on HoleVue™ and IntelliGreen® screens is locked by default. To unlock the cursor on those screens, simply press the Center Key (Power button). Once unlocked, slide your finger across the Trackpad to freely move the cursor target to the desired location and release. Press the Center Key again to lock the target cursor in place.



## OPTICAL TRACKPAD HOW-TO GUIDE


The SkyCaddie® SGX<sup>W</sup> features an Optical Trackpad, which provides precise on-screen navigation for more accurate distances without touching, scratching or smudging your display.

The Optical Trackpad is sensitive to touch and does not require you to press down hard on the surface to move the on-screen cursor. Gently slide your fingertip across the pad to navigate. It has also been designed to work with a gloved hand.

You cannot select options on the SkyCaddie by pressing the Optical Trackpad. You will need to use one of the keys above the Trackpad to make an on-screen selection.

**CLEANING INSTRUCTIONS** :: To ensure that the Optical Trackpad operates optimally, gently clean it using the enclosed micro-fiber cleaning cloth. Please do not use any kind of cleaning fluid on the surface.

## On Menu Screens

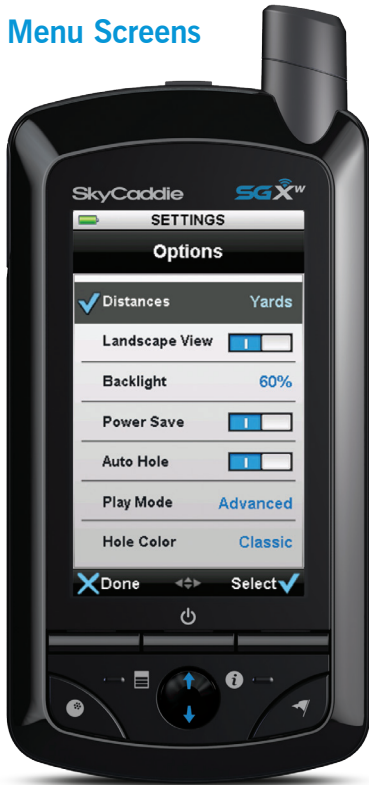

Slide your finger UP/DOWN to highlight the desired selection. Use the Left or Right Keys located directly beneath the display to make a selection.

## On List Screens



Slide your finger UP/DOWN to highlight the desired selection one at a time, or slide your finger LEFT/RIGHT to page up or page down quickly through the list. Use the Left or Right Keys located directly beneath the display to make a selection.